

DESMI Guidelines

For pump installations

PROVEN TECHNOLOGY

DESMI

Table of contents

Congratulations on your new DESMI pump. We are proud that you chose us as your pump supplier, and will do our utmost to meet your expectations.

You are always welcome to contact us at desmi@desmi.com or +45 96 32 81 11 should you have any questions concerning your pump or anything else.

Remember that DESMI supplies pumps for installations of all sizes.

Optimum pump installation	3
Before startup	4
Recommended design of pipes on suction side	5
Instruction for installing pumps with flange support(s).....	6
Allowable vibration levels on DESMi centrifugal pumps & motors	7
Insulation	8
Service areas for horizontal and vertical pumps	10
Running pumps with a frequency converter	11

This brochure contains a number of recommendations for pump installation with DESMI centrifugal pumps concerning mechanical and electrical aspects.

For details on operation and maintenance, please refer to the pump manual for the relevant pump at www.desmi.com



For final design and installation of pumps supplied by DESMI, use DS information DS/CEN/TR 13930 (recommendations for installing pipe systems) and 13932 (recommendations for installing pumps) as guidelines.

Key elements of pump installation:


- Base plate
- Pipe system
- Pipe support
- Ventilation for installation
- Service areas and lifting points for motor and pump
- Pump medium flow
- Optimum operating range
- Electrical connections (cables and screw assemblies)
- Electrical interference
- Using Common Mode filter for minimising bearing currents

Horizontal pump

Avoid 90-degree bends, T-pieces or other components that can impede flow on the pump pressure side. Gentle curves or Y-pieces to ensure optimum flow after the pump are best.

Pipe support to bear load from the pump flanges. Permitted flange forces are specified in the pump manual. Permitted flange forces can be increased by fitting flange reinforcement

Use shims between pump foot and concrete plinth or base plate to avoid tension in the pump foot

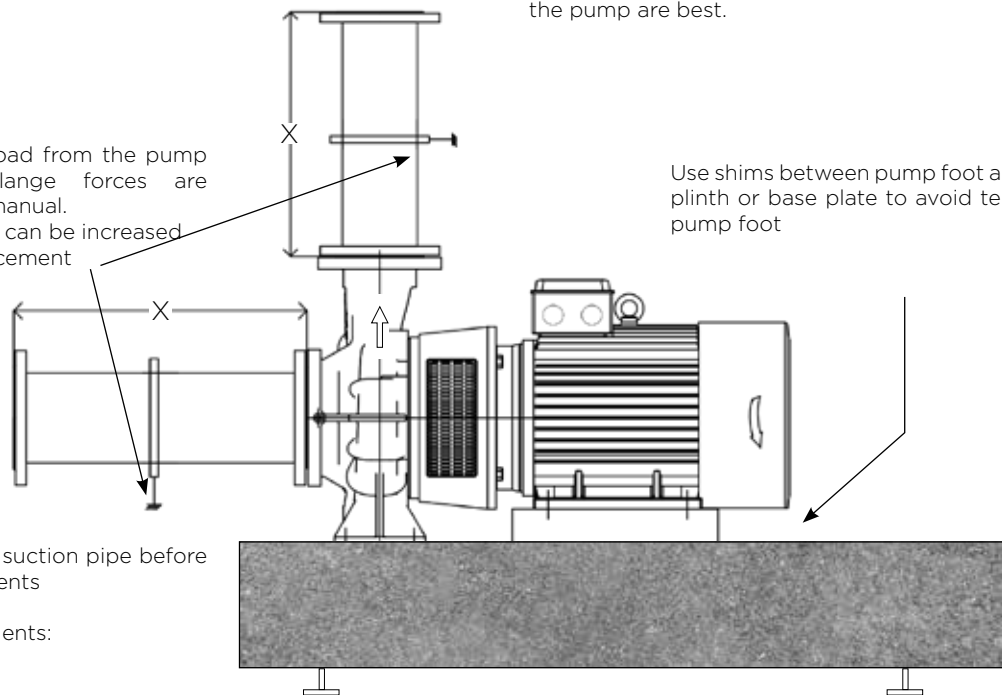

X = minimum length of suction pipe before flow-changing components

Flow-changing components:

- Compensators
- Valves
- Filters
- Bends
- Orifice plate
- Etc.


A solid base plate will minimise vibrations and extend service intervals

Pipe system before pump

DS13930/13932 recommends length of suction pipe "X" before the pump is around 5 x pipe diameter. For a DN100 pump, this will be equivalent to X= 500 mm. This rule of thumb ensures laminar flow before and after the pump that will give optimum operating conditions. But in practice, there are many good installations where this has not been fulfilled.

Optimum pump installation

Vertical pump

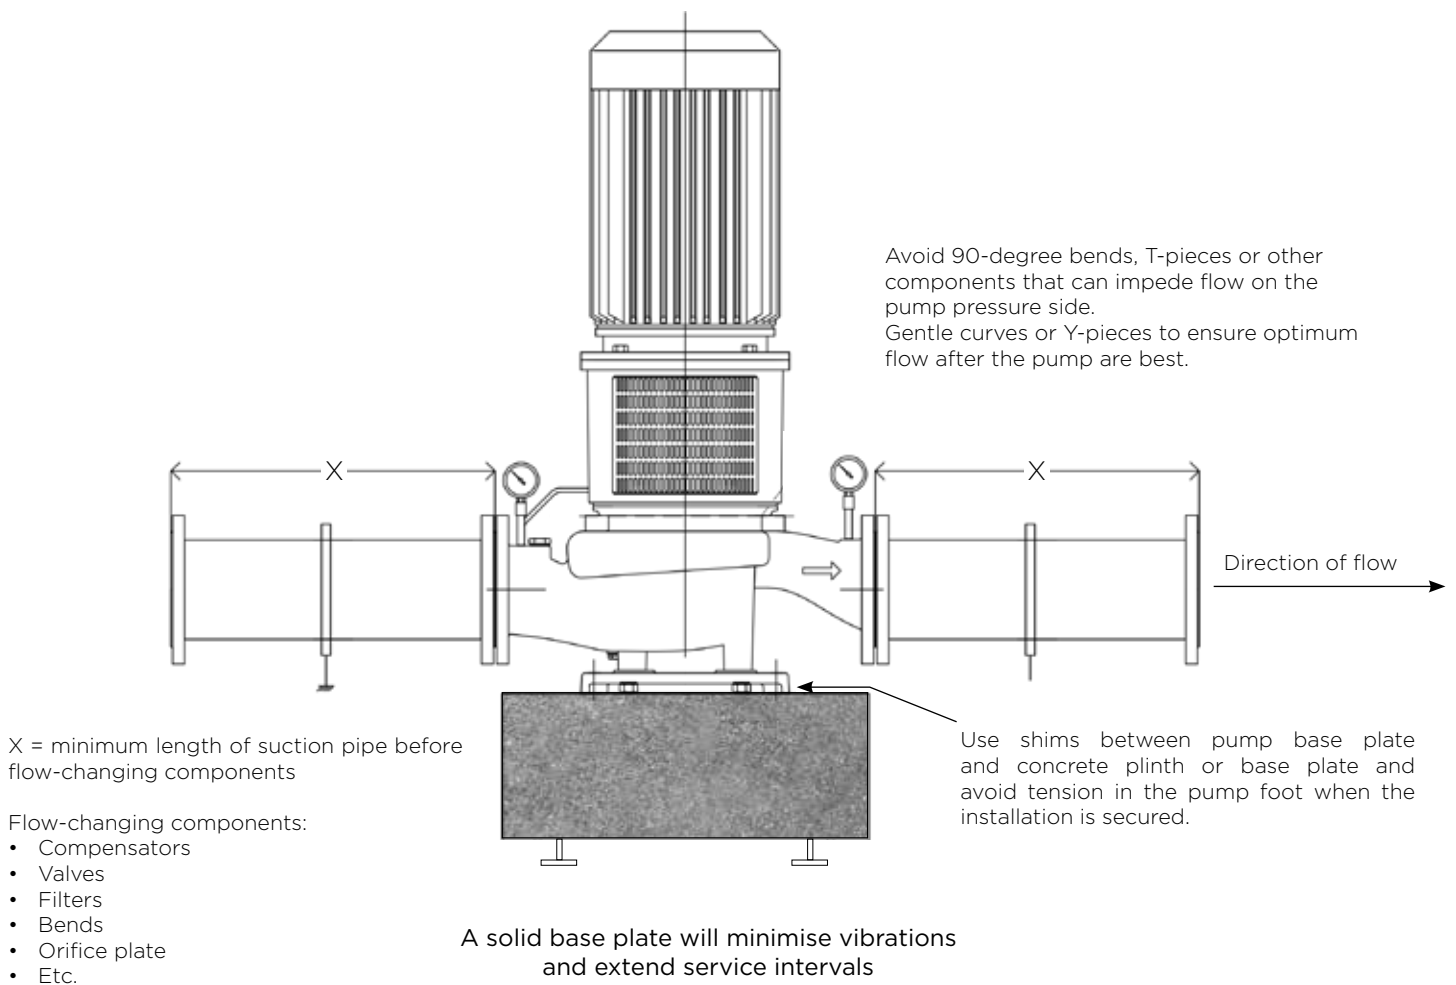

Before startup


1. Check that the pump can rotate by turning it by hand
2. Check alignment of pipe system
3. Check bearings are lubricated before startup or no later than immediately afterwards
4. Check that the pump is filled with the correct medium and bled
5. Check that the pump rotates in the correct direction and has no abnormal noises or vibrations
6. Check differential pressure (discharge pressure - suction pressure) and compare with calculated operating point for the installation

If differential pressure is too high or too low, the pump may be damaged or have impeded efficiency. High flow must be reduced either by reducing RPM or constricting the discharge valve or installing an orifice plate on the discharge side. Alternatively, change the pump hole diameter - contact DESMI.

Recommended design of pipes on suction side

Good installation

Poor installation

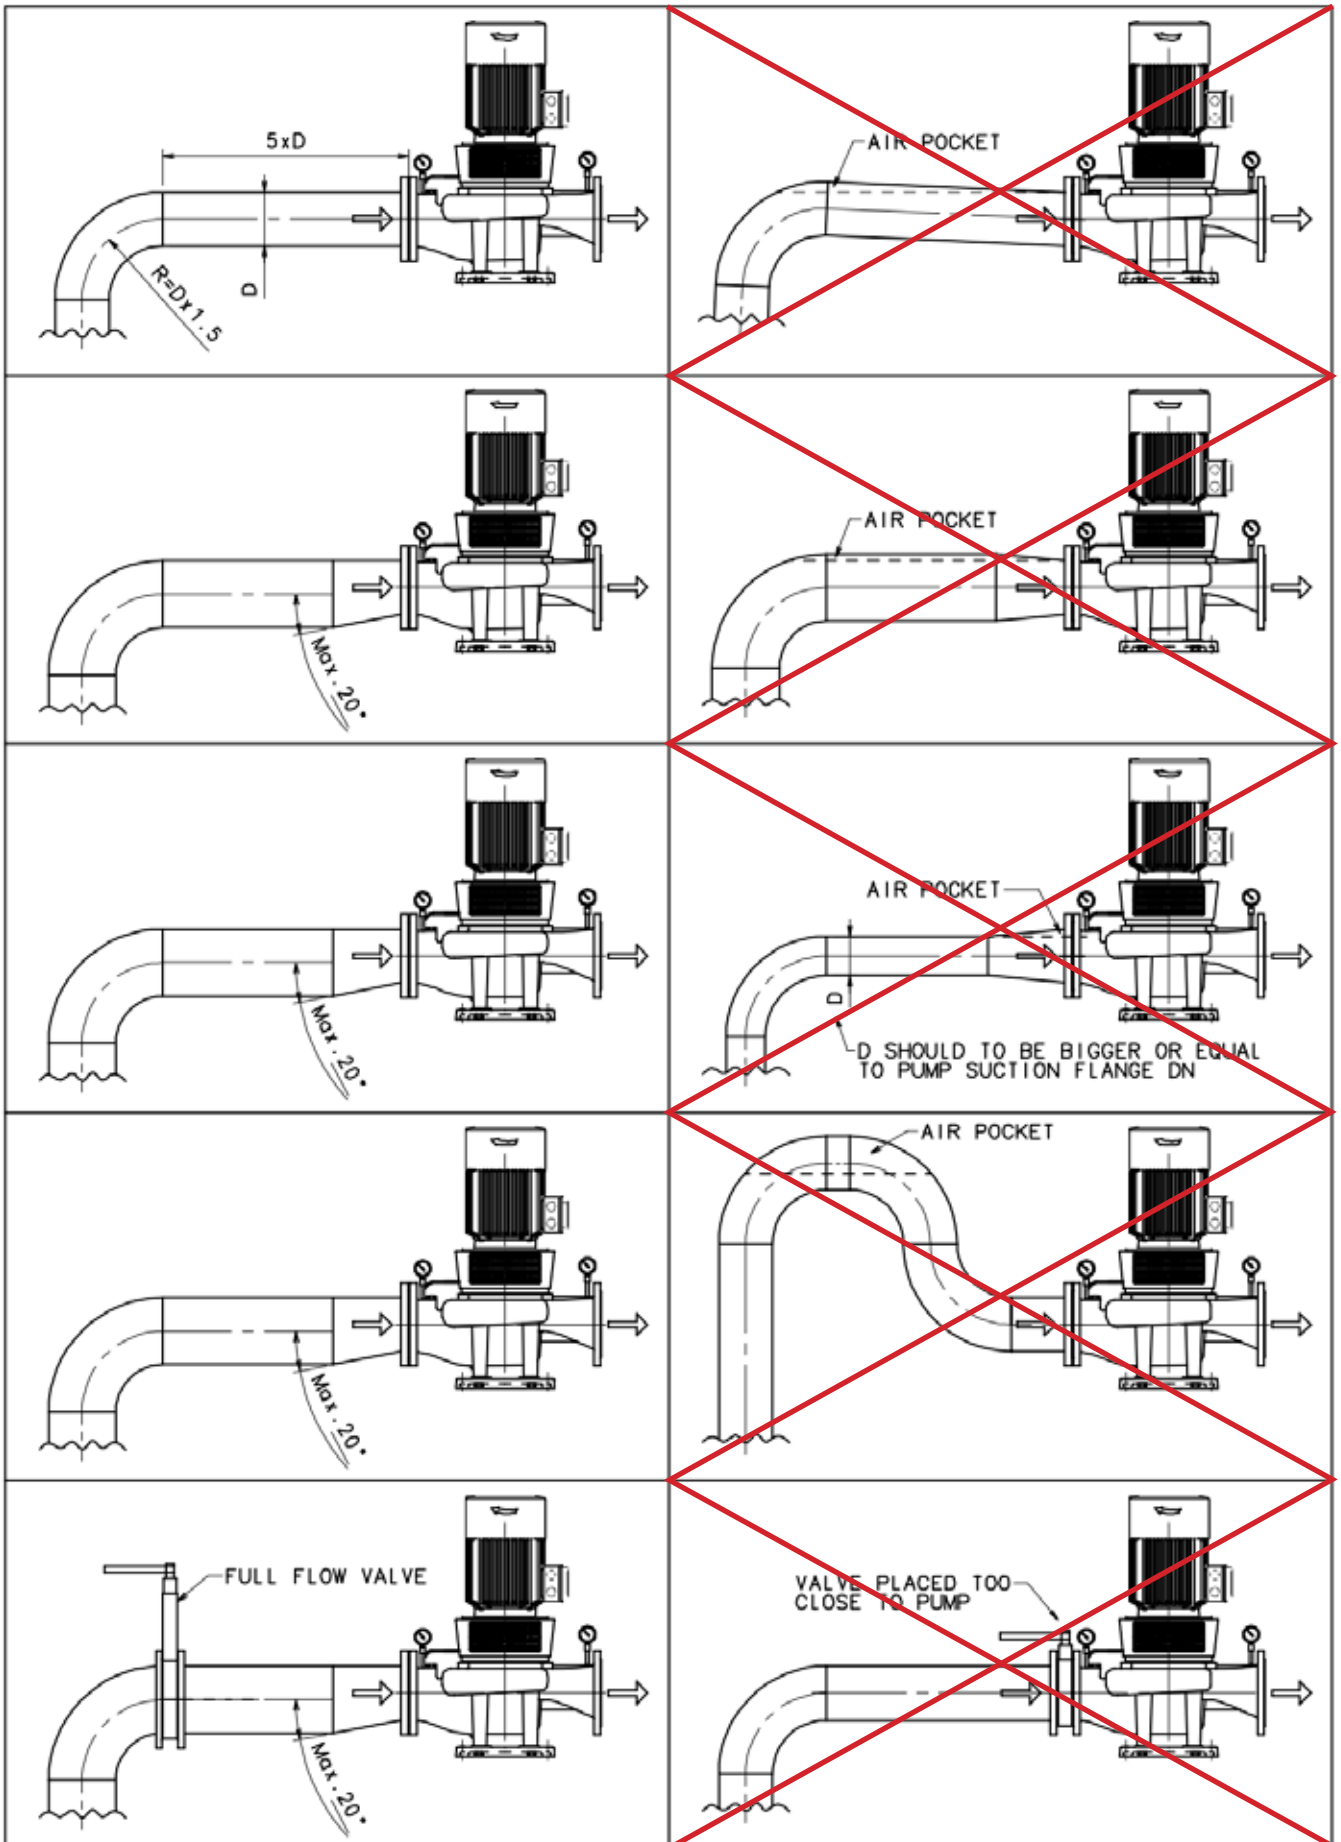

Instruction for installing pumps with flange support(s)

(also applies to horizontal pumps)

1. Fasten the pump to the underlying structure (= foundation / concrete plinth / floor) and check that the pump is level.
2. Check that the pump shaft can be rotated freely - i.e. by hand without noise and abnormal resistance.
3. Place flange support(s) at the pump's flange(s) and check that the bolt holes are aligned and that the gasket surfaces are parallel.
4. If the underlying structure is not level (plane), it may be necessary to shim under either the pump footplate or under the flange support(s).
5. Insert gasket(s) between pump and flange support(s) and hold together and parallel with 4 temporary bolts 90° offset in each flange.
6. Check that the flange support(s) have full contact with the underlying structure (if there is more than a 0.5 mm air gap under the feet, shims must be placed underneath)
7. Bolt flange support(s) to underlying structure.
8. Remove the 4 temporary bolts and mount the pipe system flange(s) and gasket(s) against the flange support(s).
9. Check that the bolt holes are aligned and that the gasket surfaces are parallel.
10. Bolt the piping system flange(s) together with the pump and flange support(s).
11. Check that the pump shaft still can be rotated freely (sound and resistance must not have changed according to point 2).
12. If the temperature of the pipe system changes significantly (up or down) after commissioning the pump and consequent thermal stresses / movements in the pipe system, if any, can be transferred to the pump, it should be checked again that the pump shaft still can rotate freely at actual upper/lower temperature limits.
13. If the pump cannot rotate freely under all operating conditions, the pipe system must be better supported - alternatively, compensator(s) must be installed between the pump and pipe system.



Allowable vibration levels on DESMI centrifugal pumps and motors

As standard DESMI centrifugal pumps with electric motor generate less than 2.8 mm/s vibration velocity (measured in 3 directions at motor flange level on vertical pumps) during a factory test.

The pump and electric motor industry generally agrees that vibration levels above 7 mm/s are damaging - i.e. this will result in shorter lifetimes of e.g. bearings and/or shaft seals in pumps (and bearings in motors) than normally expected. This agrees with the recommendations in the international standard ISO 10816-3.

But in pump installations on ships external excited vibrations from main engine and/or auxiliary machinery are transferred from ship hull to the pump often resulting in much higher vibration velocities than 7 mm/s.

DESMI recommends the following values for protective settings:

Location	Vibration alarm level (mm/s)	Vibration trip level (mm/s)
Pump	>7	>10
Motor (drive end)	>7	>10
Motor (non drive end)	>10	>15

ISO 10816-3 Vibration Severity Chart								VELOCITY 10-1000 Hz > 600 rpm 2-1000 Hz > 120 rpm		
									11	0.43
			D						7.1	0.28
			C						4.5	0.18
			B						3.5	0.14
									2.8	0.11
									2.3	0.09
									1.4	0.06
			A						0.71	0.03
									mm/s rms	inch/s rms
Rigid	Flexible	Rigid	Flexible	Rigid	Flexible	Rigid	Flexible		Foundation	
pumps > 15 kW radial, axial, mixed flow				medium sized machines 15kW <P<300kW		large machines 300kW <P< 50 MW			Machine type	
integrated driver		external driver		motors 160 mm ≤ H ≤ 315 mm		motors 315 mm ≤ H				
Group 4		Group 3		Group 2		Group 1		Group		
	A	New machine condition				C	Short term operation allowable			
	B	Unlimited long-term operation allowable				D	Vibration causes damage			

Service areas for horizontal and vertical pumps


To facilitate future servicing of pump and electric motor, lifting gear should be installed, such as access for cranes, lifting points, ceiling beams or other approved equipment for the purpose.

Carefully consider where the pump installation will be placed, as transportable approved lifting gear often needs considerable space.

* If there is no permanently-installed lifting gear, an approved lifting beam is required.


Approved lifting beam

The beam must be able to take the total weight of pump and electric motor (see weights in pump manual)

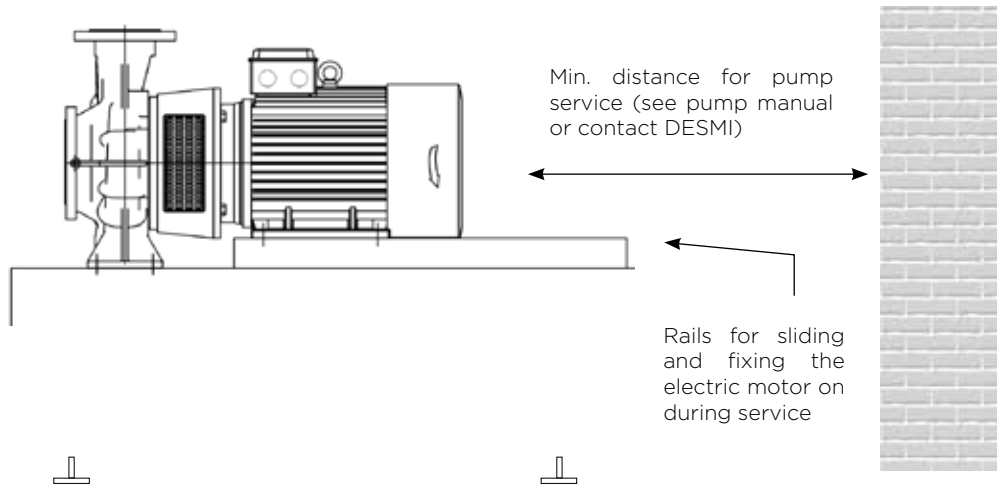

Approved lifting beam



Individual lifting height for the installations - see pump manuals or contact DESMI

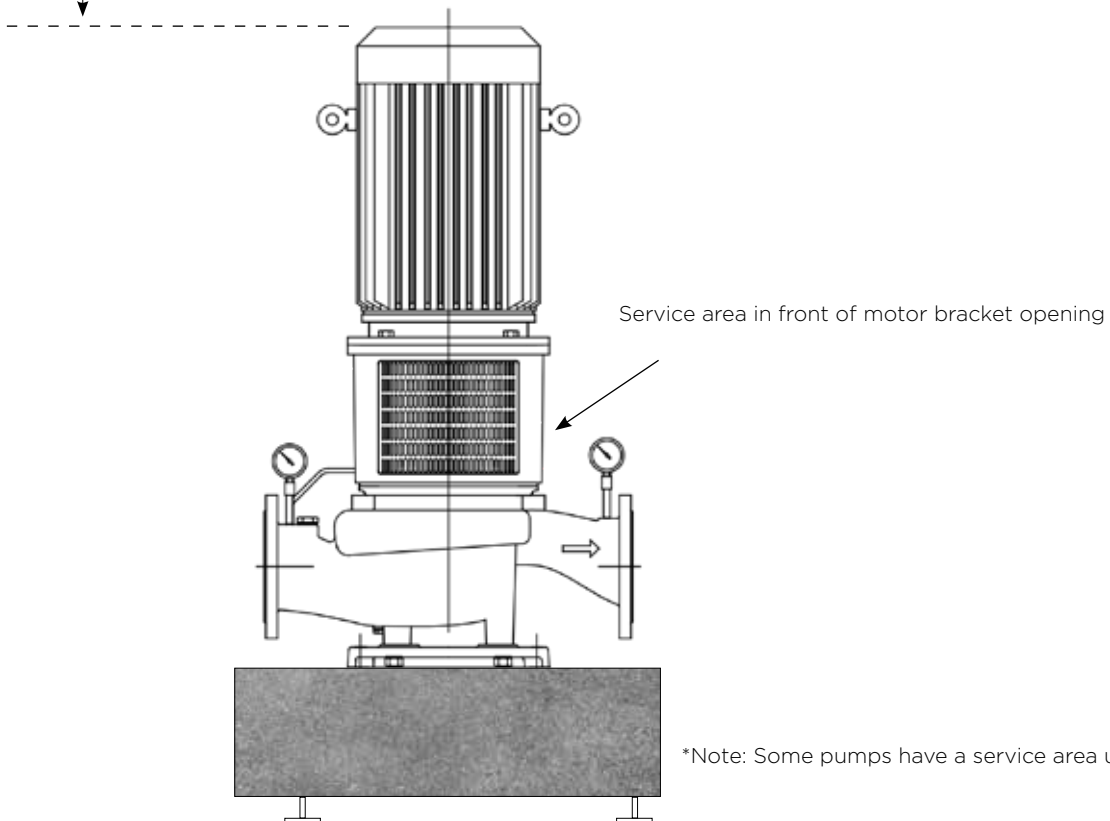

Pumps supplied by DESMI can in general be insulated for heat or cold except at the top of the pump housing – i.e. up to the base flange on the motor bracket as shown on the diagram below. No holes or screen openings on the motor bracket can be covered by insulation.

An electric motor will become hotter if mounted on a fully insulated pump. The ball bearings and/or coils in the motor can overheat if a pump is insulated all the way up to the motor flange.

Unrestricted ventilation of the motor bracket is therefore necessary to provide sufficient cooling of pump and motor bearings – in pumps with bearings (A02 version) and without (A12 version).

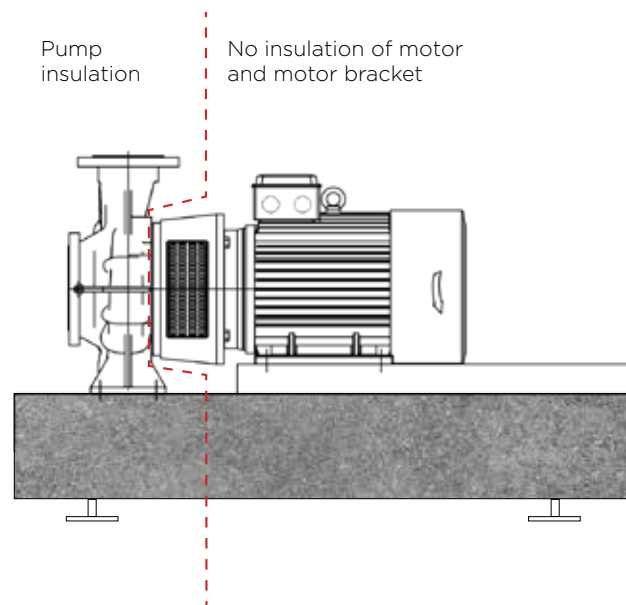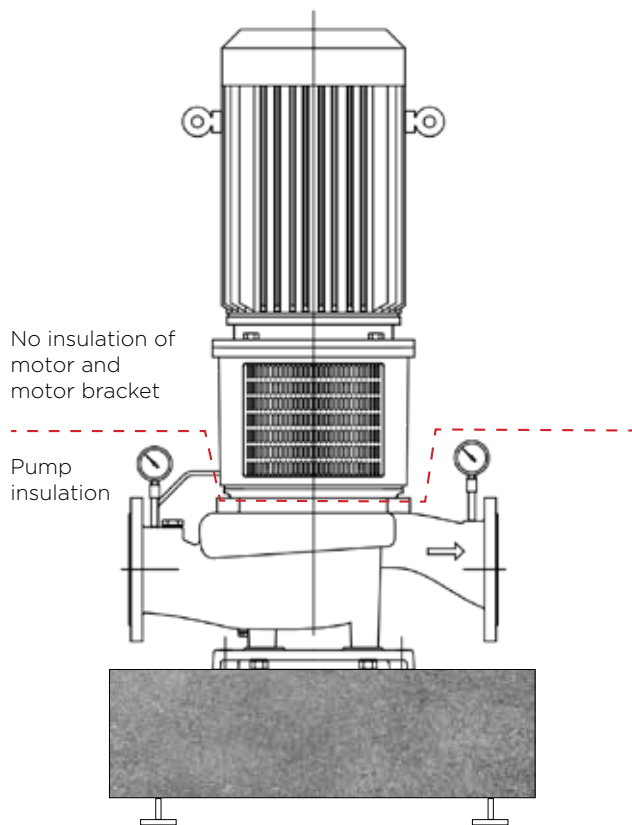

Running pumps with a frequency converter

When a pump installation includes a frequency converter with the primary purpose of being able to regulate electric motor and thus pump RPM, the frequency converter can tend to generate very high current peaks. Failure to take this into account when designing the overall installation can cause damage, including bearing currents that can damage the motor's bearings very quickly. To avoid such problems and damage, DESMI has a number of recommendations that can minimise the risk of bearing currents and eliminate the destructive effect of the same if they occur.

Electric installation

DESMI recommends using screened EMC cables and EMC screw assemblies to avoid electrical interferences, and the installation must be correctly potential equalised. It is important that any paint residue etc. on screw assemblies in terminal boxes on motor and frequency converter is removed to achieve good electrical connection.

Depending on motor size and IE classification, DESMI recommends installing a Common Mode filter, the function of which is to reduce common mode current peaks between the frequency converter and motor. The larger the motor and IE

classification, the greater the risk of bearing currents damaging the motor bearings. Alternatively, if the person responsible for installation can confirm (via measurement) that no bearing currents occur, a Common Mode filter can be avoided.

The length of motor cables also influences filter size and type that should be used.

Mechanical installation

A Common Mode filter will reduce but cannot eliminate current peaking, and depending on how correctly electrical installation has been performed (Common Mode filter, screened cables, potential equalisation etc.) bearing currents can still occur. The destructive effect on the motor of such currents can be strongly reduced by using insulated bearings or hybrid (ceramic) bearings in the motor. DESMI's recommendations in relation to use of these are also given in the table. An electric motor with ceramic bearings is more expensive than the same motor type with standard or insulated bearings. The advantage of using ceramic bearings is that the insulating effect is greater than for standard insulated bearings and that the overall lifetime of ceramic bearings is significantly longer.



DESMI's recommendations concerning use of Common Mode filters and insulated bearings

Motor size [M]	Motor IE class					
	IE2		IE3		IE4	
	Insulated bearings	Common Mode filter	Insulated bearings	Common Mode filter	Insulated bearings	Common Mode filter
$M \leq 4 \text{ kW}$	No	No / Yes	No	No / Yes	No	Yes
$5,5 \text{ kW} \leq M \leq 30 \text{ kW}$	No	Yes	No / Yes	Yes	No / Yes	Yes
$37 \text{ kW} \leq M \leq 55 \text{ kW}$	No / Yes	Yes	No / Yes	Yes	Yes	Yes
$75 \text{ kW} \leq M$	Yes	Yes	Yes	Yes	Yes	Yes

(The recommendations in the table are based on experience and input from the various suppliers of electric motors and frequency converters)

DESMI as pump supplier (with electric motor) and frequency converter

DESMI works closely with most manufacturers of electric motors and frequency converters, and therefore recommends the full package. In such situations, DESMI will provide consultancy to ensure all aspects concerning bearing currents etc. are taken into account. If the order also includes starting the pump, the installation will also be checked and approved.


DESMI as pump supplier (with electric motor)

In other situations, DESMI will only supply the pump with a motor, and our customers provide frequency converter and electrical installation. In such situations, we have less influence on installation as a whole and advise that our recommendations are followed. We naturally provide consultancy to the extent a customer requires it.

For more information on Common Mode filters and other anti-interference filters, such as Sinus and dU/dt filters, DESMI is happy to provide general input and consultancy. For more detailed information on the various products, we refer to our suppliers of frequency converters.

"Interference" passed to the grid from frequency converters.

Apart from generating interference for motors and pump installations, frequency converters are also known to generate interference towards the electricity grid - and depending on converter size, the electricity provider can specify that such interference is limited. DESMI Automation can measure and provide solutions for such situations.

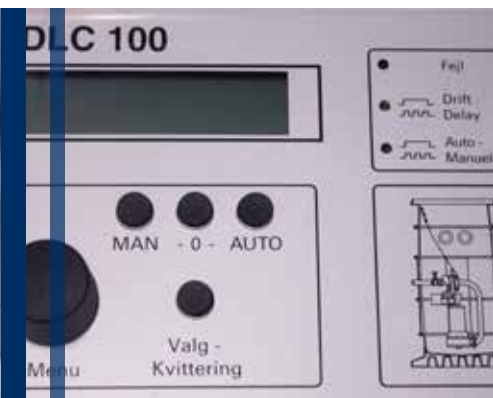

THE DESMI GROUP - ONE GLOBAL COMPANY

DESMI offices:

Africa

DESMI Africa Ltd.
Tel.: +255 222 600014

Canada

DESMI Inc.
Tel.: +1 905 321 3471

China

DESMI Pumping Technology (Suzhou) Co., Ltd.
Tel.: +86 512 6274 0400

DESMI Pumping Technology (Suzhou) Co., Ltd.
Shanghai Liaison Office
Tel.: +86 21 6071 06 00-05, 6071 06 07-13

DESMI Pumping Technology (Suzhou) Co., Ltd.
Tianjin Liaison Office
Tel.: +86 22 5890 5169

DESMI Pumping Technology (Suzhou) Co., Ltd.
Guangzhou Liaison Office
Tel.: +86 20 2826 1830

DESMI Pumping Technology (Suzhou) Co., Ltd.
Chongqing Liaison Office
Tel.: +86 23 8823 3518

DESMI Pumping Technology (Xuancheng)
Co., Ltd.
Tel.: +86 563 2612 570

Denmark

DESMI A/S - Group Head Quarter
Tagholm 1
DK-9400 Nørresundby
Tel.: +45 96 32 81 11

DESMI Pumping Technology A/S
Tel.: +45 96 32 81 11

DESMI Danmark A/S
Tel.: +45 72 44 02 50

DESMI DeServe A/S
Tel.: +45 96 32 81 10

DESMI Ro-Clean A/S
Tel.: +45 65 48 16 10

DESMI Ocean Guard A/S
Tel.: +45 96 32 81 99

France

DESMI S.A.R.L.
Tel.: +33 130 439 710

Germany

DESMI GmbH
Tel.: +49 407 519847

Greece

DESMI Greece
Tel.: +30 2114 111 893

India

DESMI India PVT.
Tel.: +1800 123 123 001

Italy

DESMI Italy
Tel.: +39 3201 189700

Indonesia

DESMI Ro-Clean APAC
Tel.: +62 21 2358 5636

Korea

DESMI Korea
Tel.: +82 51 723 8801

Netherlands

DESMI B.V.
Tel.: +31 30 261 00 24

Nigeria

DESMI Flow Technology West Africa Limited
Tel.: +234 916 172 7898

Norway

DESMI Norge AS
Tel.: +47 38 12 21 80

Poland

DESMI Sp. z o.o.
Tel.: +48 22 676 91 16

Singapore

DESMI Singapore Pte. Ltd.
Tel.: +65 62 50 71 77

Sweden

DESMI Sweden
Tel.: +46 70 826 80 04

UAE

DESMI Pumping Technology A/S (Br.)
Dubai Office
Tel.: +971 4 320 0499

Abu Dhabi Office
Tel.: +971 50-821 4979

U.K.

DESMI Ltd.
Tel.: +44 1782 566900

USA

DESMI Inc.
Tel.: +1 757 857 7041

- DESMI Service Centers
- DESMI Companies
- DESMI Dealers/Agents

In need of more information or specifications? Contact us at desmi@desmi.com or read more about DESMI and DESMI's other products and solutions at www.desmi.com

MARINE & OFFSHORE

INDUSTRY

ENVIRO-CLEAN

DEFENCE & FUEL

UTILITY